Inflatable Lamp

Instruction Manual

 


SAFETY GUIDELINES

Keep away from sharp objects.











- To prevent air leaks, cover the cap immediately after removing the air pump.
- Tips: Please deflate and store after each use.
 - Tips: Please don't inflate with too much pressure.
 - Tips: Do not allow water to enter the inflatable lamp.

CONTENTS & PART NAMES

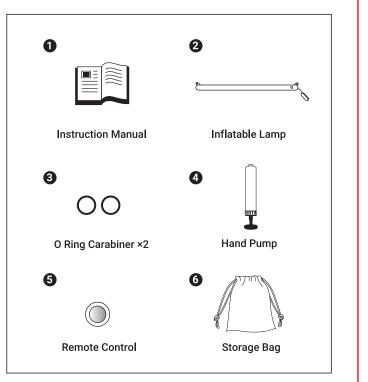



USE IN SPACE ACACIA TENT

1. Inflate the inflatable lamp completely.

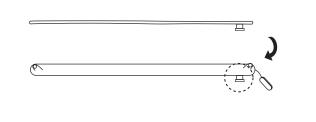


Inflatable Lamp

 

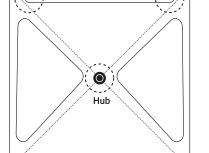

2. Connect the lamp to tent with O Ring Carabiners.

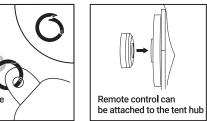

Hand Pump

USE IN OTHER OCCASIONS SPECIFICATIONS 4. Deflate the inflatable lamp. 3. Connect Type-C cable to inflatable lamp's button switch. TPU Main Material Input Rated Voltage 12V DC Magnet ×4 6W Maximum Power 0.5A Maximum Working Current LED Light Source Color Temperature 2700K/6500K Remote Control Distance 20M SWITCH CONTROL Operating Temperature -20~50°C/-4~122°F The lights can be controlled by button switch and remote control. In Car In House Storage Temperature -20~60°C/-4~140°F ON/OFF (The brightness of the light source Short Press: varies with each turn on, from warm white light, warm yellow light, and yellow light.) CHAGE THE BATTERY Long Press: Brightness increase/brightness decrease. Open the back cover to repalce the battery. Lithium Battery: 3V Remote Control **Button Switch**